

INTEG ON-GRID INVERTER
Solinteg OGS-3.6/4.2/5/6K




Quick Use Guide

ENGLISH VERSION


1 Installation

A Check Packing List

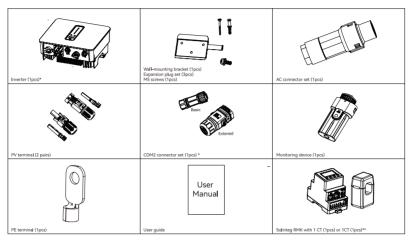


^{*}There are two versions of the COM2 connector, please select the appropriate version according to the order requirements.


B Installation Location




C Installation Space

Installation Angle

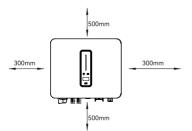







^{**}Optional






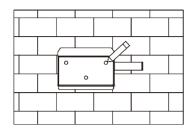


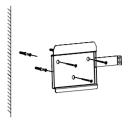

G Mounting Inverter






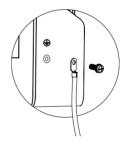


2 Electrical Connection


A Electrical Wiring Diagram

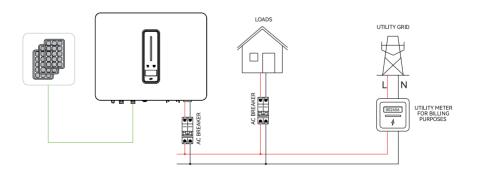

Electrical Wiring Diagram

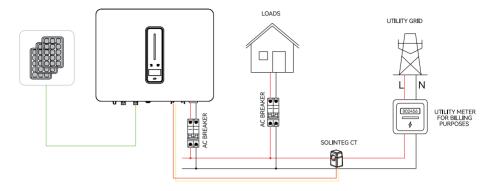


Electrical wiring diagram of export limit

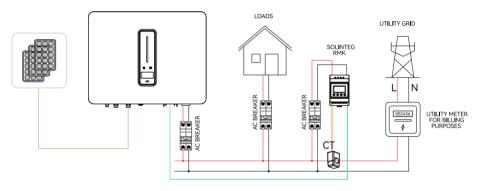


Electrical wiring diagram of export limit & 24 hours load consumption




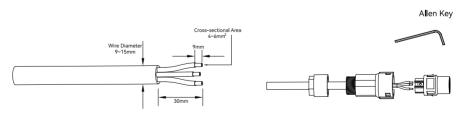

① ②

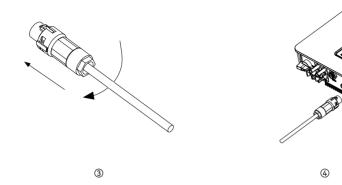

C PV String Connection

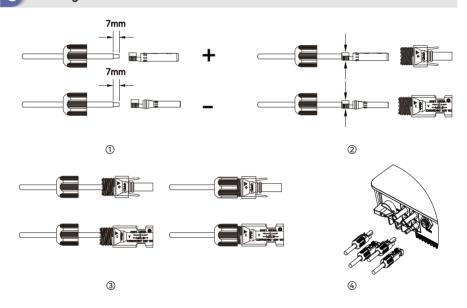

Monitoring Device Installation



If the inverter is connected to the Solinteg Datalogger and RMK, the Monitoring Device does not need to be connected, and refer to the Datalogger or RMK manual to connect it to the internet.




RMK installation (Optional)




No.	Definition	Function
5	L-S1	
6	L-S2	To detect the CT current
7-10	/	
11	PE	Ground Connection
1	L	L (N) and a state of the
2-3	/	L /N connect to grid to detect power grid voltage
4	N	,
RS485-1	RS485	Communicate with inverter
RS485-2	/	Reserved


RMK terminals definition


Communication connection (Basic version)



Pin	Definition	Function
1	RS485-A1	
2	RS485-A2	Communicate with Solinteg RMK or Datalogger.
3	RS485-A1	
4	RS485-A2	
5	/	Reserved






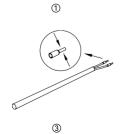




4

2







4

(5)

G Communication connection (Extended version)






Pi	in	Definition	Function	
1		RS 485 A2		
- 2	2	RS 485 B2	Reserved	
3	3	Fast stop +		
	,	Fast stop -	Reserved	
- 5	5	Dipswitch-1	DRED resistor dipswitch between15(COM D/0) and 16(REF D/0)	
- 6	5	Dipswitch-2	120Ω terminating resistor dipswitch between RS 485 A1 and RS 485 B1	
7	7	CT-S1	Data stilled of CT annual for some at limit	
	3	CT-S2	Detection of CT current for export limit	
9	>	RS 485 A1	Communicate with Solinteg RMK for export limit & 24 hours load con sumption. In case of multiple inverters, all the inverters can be daisy-chained via RS485 cables.	
1	0	RS 485 B1		
1	1	RS 485 A1		
1.	2	RS 485 B1		
1	3	/	2	
1-	4	/	Reserved	
1	5	COM D/0		
1	6	REF D/0	DRED	
1	7	DRM4/8	- DRED - For Australia and New Zealand	
1	8	DRM3/7		
1	9	DRM2/6		
2	0	DRM1/5		



1



2

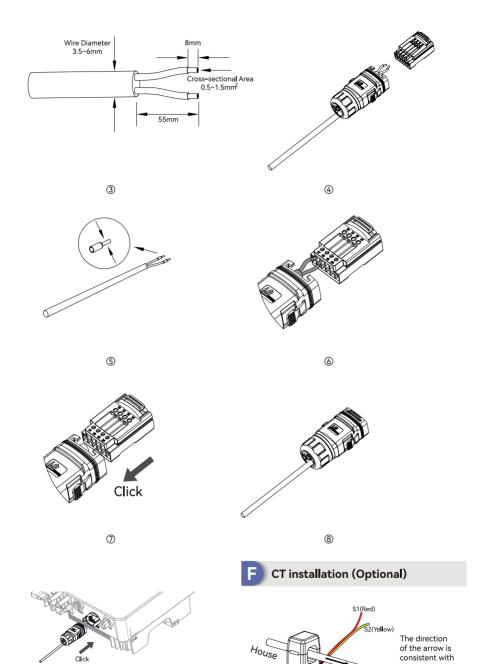

9


the direction of


inside the CT.

the arrow

Grid

2 WiFi Module Configuration Guide

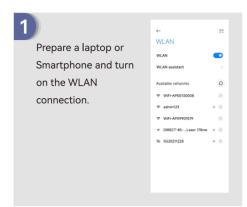

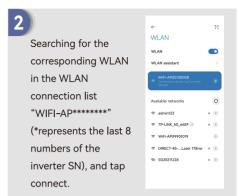

Open the browser and enter 10.10.100.254.

Tap"Scan", A list of WiFi-Assistant pop up.

Click and select the corresponding router network you want to configure.



Input the password of wireless network, (note the case difference), Tap"Connect"






3 LAN Module Configuration Guide

If DHCP is enabled on the router, the LAN module does not need to be configured. Otherwise, the LAN module will need to be configured on inverter screen.

- ① Find the "General Settings" by short pressing the button on the inverter screen.
- ② Enter the "General Settings" by long pressing the button on the inverter screen.
- ③ Find "DHCP set" by short pressing the button, then turn off DHCP function by short pressing and long pressing the button on the inverter screen.
- ④ Then set the "IP Address", "Gateway Address", "Subnet Mask" and "DNS Address". Short press to change the number, long press to confirm the number and jump to the next number.

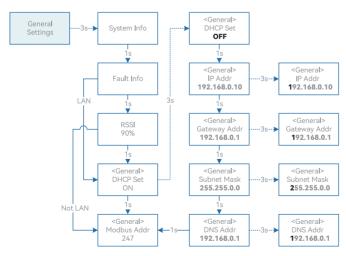

4 Indicator

A Inverter

Item	Indicator	St	atus	Description
Power and 1 Alarm Indic		Off		No power.
		Blue	Quick flashing	Inverter entered self-test status.
			Slow flashing	Inverter entered waiting status.
	Alarm Indicator		Breathe flashing	Inverter works normal.
		Red	Always on	An alarm or fault is detected, view the fault info on the display.
	Grid 2 Indicator	Off	Grid lost.	
		Slow flashing	Inverter detected grid but not running in on-grid mode.	
	Indicator	Always on	Inverter works in on-grid mode.	
3	Communica-	Green	Always on	The inverter communication is running nor-mally.
3	tion Indicator	Green	Flashing	The inverter communicates with datalogger or Solinteg RMK through RS485.
4	Display	Display off to save power, press the button to wake up the display.		
5	Button	Switch display information and set parameters by short press or long press.		

B 5.2 Monitoring Device

Indicator Status	Description
Off	Connection abnormal
Always On	Communicate with the server normally
Slow flashing	The monitoring device is not connected to the router or is not connected to the base station.
Quick flashing	The monitoring device is connected to the router or connected to the base station but not connected to the server.

Button	Description
Press 1 second	Reset device, the indicator goes off for 2 seconds, then flashes normally.
Press 5 second	Restore factory default settings, the indicator goes off for 2 seconds, then flashes once every 2 seconds, until the factory restore is completed.

INTEGRATE SOLAR INTELLIGENT



www.solinteg.com