

INTEG ON-GRID INVERTER

OGS-3.6/4.2/5/6K




Quick Use Guide

ENGLISH VERSION


1 Installation

A Check Packing List

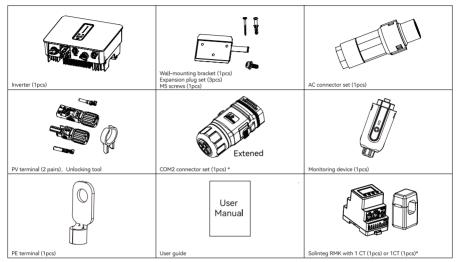


*Optional


B Installation Location

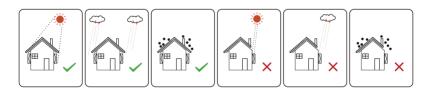

C Installation Space




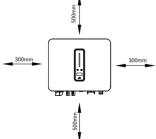


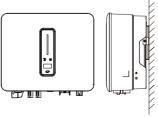






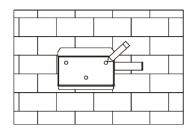

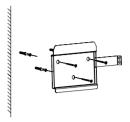

G Mounting Inverter




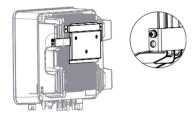




2 Electrical Connection


A Electrical Wiring Diagram

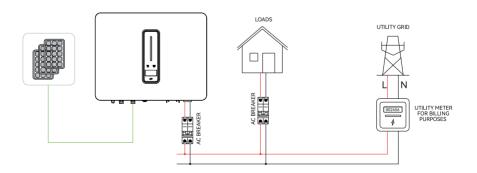

Electrical Wiring Diagram

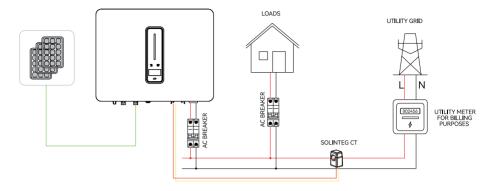


Electrical wiring diagram of export limit

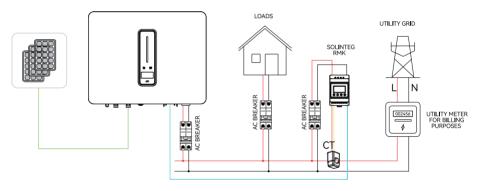


Electrical wiring diagram of export limit & 24 hours load consumption




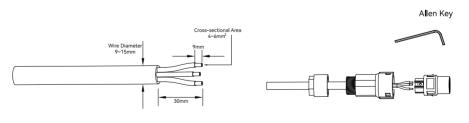

① ②

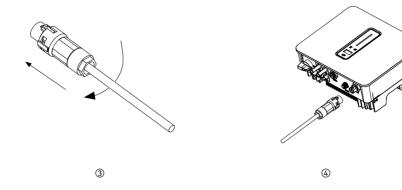

C PV String Connection

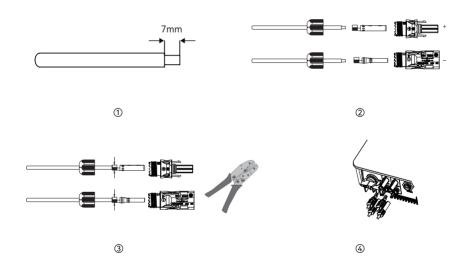

Monitoring Device Installation



If the inverter is connected to the Solinteg Datalogger and RMK, the Monitoring Device does not need to be connected, and refer to the Datalogger or RMK manual to connect it to the internet.

RMK installation (Optional)




No.	Definition	Function		
5	L-S1			
6	L-S2	To detect the CT current		
7-10	/			
11	PE	Ground Connection		
1	L	1.701		
2-3	/	L /N connect to grid to detect power grid voltage		
4	N	1 3 3		
RS485-1	RS485	Communicate with inverter		
RS485-2	/	Reserved		

RMK terminals definition


Communication connection




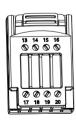


Pin	Definition	Function	
1	RS 485 A2	- Reserved	
2	RS 485 B2		
3	Fast stop +	Reserved	
4	Fast stop -	keserved	
5	Dipswitch-1	DRED resistor dipswitch between15(COM D/0) and 16(REF D/0)	
6	Dipswitch-2	120Ω terminating resistor dipswitch between RS 485 A1 and RS 485 B1	
7	CT-S1	Data the of OT a seed for a seed for the	
8	CT-S2	Detection of CT current for export limit	
9	RS 485 A1	① Communicate with Solinteg RMK for export limit & 24 hours load con	
10	RS 485 B1	sumption.	
11	RS 485 A1	② In case of multiple inverters, all the inverters can be daisy-chained via	
12	RS 485 B1	RS485 cables.	
13	/		
14	/	Reserved	
15	COM D/0		
16	REF D/0	DRED	
17	DRM4/8		
18	DRM3/7	For Australia and New Zealand	
19	DRM2/6		
20	DRM1/5		




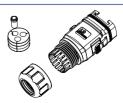

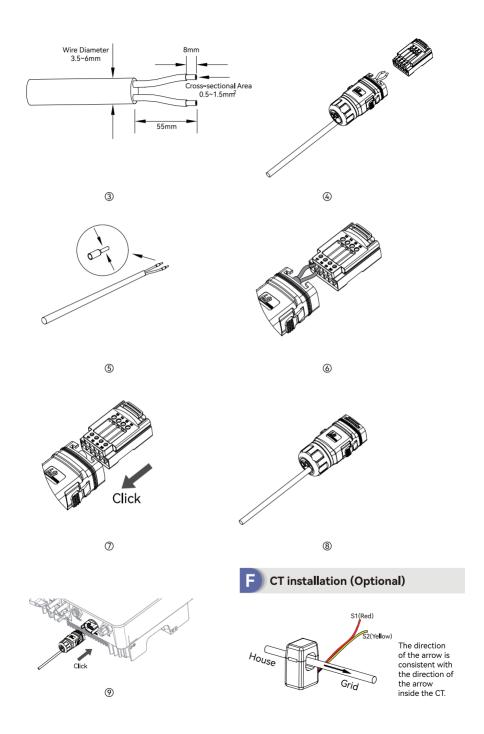

2 WiFi Module Configuration Guide

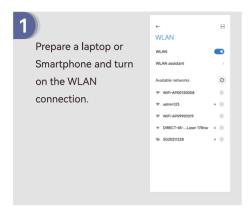


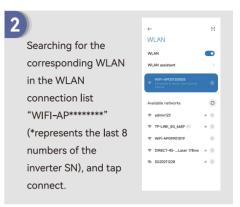







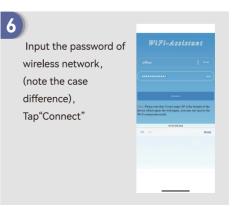




3 LAN Module Configuration Guide

If DHCP is enabled on the router, the LAN module does not need to be configured. Otherwise, the LAN module will need to be configured on inverter screen.

- ① Find the "General Settings" by short pressing the button on the inverter screen.
- ② Enter the "General Settings" by long pressing the button on the inverter screen.
- ③ Find "DHCP set" by short pressing the button, then turn off DHCP function by short pressing and long pressing the button on the inverter screen.
- ④ Then set the "IP Address", "Gateway Address", "Subnet Mask" and "DNS Address". Short press to change the number, long press to confirm the number and jump to the next number.

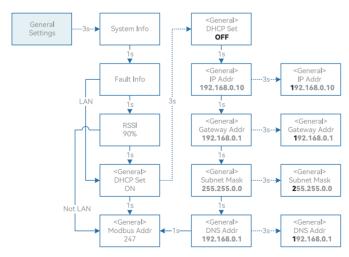

4 Indicator

A Inverter

Item	Indicator	Status		Description	
		Off		No power.	
		Blue	Quick flashing	Inverter entered self-test status.	
1	Power and		Slow flashing	Inverter entered waiting status.	
	Alarm Indicator		Breathe flashing	Inverter works normal.	
		Red	Always on	An alarm or fault is detected, view the fault info on the display.	
	Grid Indicator	Off	Grid lost.		
2		Slow flashing	Inverter detected grid but not running in on-grid mode.		
	In a sate	Always on	Inverter works in on-grid mode.		
3	Communica- tion Indicator	Green	Always on	The inverter communication is running normally.	
3		Green	Flashing	The inverter communicates with datalogger or Solinteg RMK through RS485.	
4	Display	Display off to save power, press the button to wake up the display.			
5	Button	Switch display information and set parameters by short press or long press.			

B Monitoring Device

Indicator Status	Description
Off	Connection abnormal
Always On	The Communication Module is not connected to the router.
Slow flashing	The Communication Module is connected to the router but not connected to the server.
Quick flashing	The Communication Module is normal working.

Button	Description	
Press 1 second	Press the Button less than 5s : Restart	
Press 5 second	Press the Button more than 5s: Reset (Delete the previous configuration)	

INTEGRATE SOLAR INTELLIGENT



www.solinteg.com